



Bracket & Cover Installation



One Bracket and Cover includes:

QTY 1- Heavy Duty Cover HDC03

QTY 1- Rear Tab RT001


QTY 4- 5/16"-18 x 3/4" Flat Head

QTY 1- 3/16" L Hex Wrench

QTY 1- AL Bracket UB003



Thread the 5/16"-18 screw into the Rear Tab with the "nipple" facing the cover. (It helps to work the screw through both holes initially before attaching it as some threads can be stiff.) Also install the AL bracket underneath the seat rail. The bracket is directional with the large angled end at the front. You will angle and slide the bracket underneath the rail, and rotate it up. The profile is designed to fit the stock floor cutout, knowing Ford there may be some trimming necessary depending on your floor.

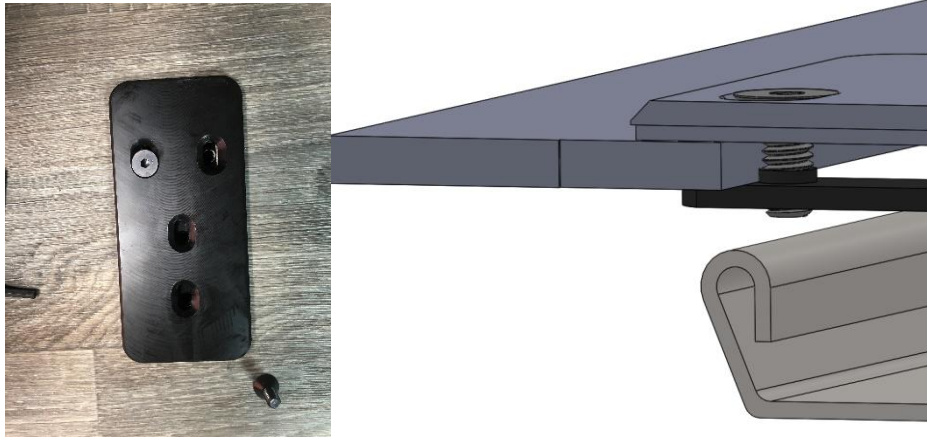

The Rear Tab will slide under the subfloor, above the seat rail. Begin to tighten the screw until the second tab hole is visible and screw in the second 5/16-18 screw. Hand thread the screws into the AL Bracket to keep the cover in place while tightening.



Tighten screws until play is taken out of cover.

Brackets have not been tested for FMVSS standards. Knarly Vans LLC will not be responsible for any damage caused to a purchaser or user's vehicle or any vehicle accessories caused by the use of any Knarly Vans products. It is to the sole responsibility of purchaser to inspect and ensure that the intended vehicle and Knarly Vans products are suitable and compatible for travel on road and off road. No seller nor any manufacturer of Knarly Vans products will be liable for any loss, damage or injury directly or indirectly arising from the use of any Knarly Vans products. Before using any Knarly Vans products, the purchaser or user will determine the suitability of the product(s) for their intended use(s) and the purchaser or user shall assume all responsibility and risk in connection therewith.